

Whirlpool Gold® 30" Electric Cooktop

G9CE3074X



Key Features

- Eco-Friendly Schott Ceran® Cooktop is easy to clean and won't crack or chip with intense heat.
- Precisely control your cooktop's lowest simmering temperatures with the AccuSimmer® Plus.
- Easy-to-use Tap Touch controls gives precise control over both high and low temperatures.
- Control Lock – A control lock disables the control panel to avoid unintended use or other changes to cooking settings.
- Hot Surface Indicator Light – A hot surface indicator light illuminates when the cooktop surface is still hot to the touch – even after the heating element has been turned off.
- 12/9/6" Triple Radiant Element
- 10/6" Dual Element
- (2) 6" Elements
- Can be installed over a single built-in wall oven for added installation flexibility.
- ADA Compliant.






Whirlpool Gold® 30" Electric Cooktop

G9CE3074X

Specifications

| COOKTOP MATERIAL | |
|-------------------------------------|----------------|
| Ceramic Glass | Yes |
| ELEMENT DETAIL | |
| Number of Elements | 4 |
| Left Front Size (in) | 6 |
| Left Front Power (watts) | 1200 |
| Right Front Size (in) | 6 |
| Right Front Power (watts) | 1200 |
| Left Rear Size (in) | 10/6 |
| Left Rear Power (watts) | 2500/1200 |
| Right Rear Size (in) | 12/9/6 |
| Right Rear Power (watts) | 3000/1950/1050 |
| COOKING SURFACE CONTROLS | |
| Power On Indicator Light | Yes |
| Hot Surface Indicator Light(s) | Yes |
| Control Lockout | Yes |
| ELECTRIC COOKTOP FEATURES | |
| AccuSimmer® Plus | Yes |
| ELECTRICAL REQUIREMENTS | |
| Voltage | 240 |
| Circuit Amps@240VAC | 40 |
| DIMENSIONS | |
| Overall Height | 3 ¾ |
| Overall Width | 30 13/16 |
| Overall Depth | 21 ¾ |
| Cutout Width | 29 ½ |
| Cutout Depth | 20 ½ |
| All dimensions are shown in inches. | |
| COLOR AVAILABILITY | |
| | B, S |

*B-Black and S-Stainless Steel

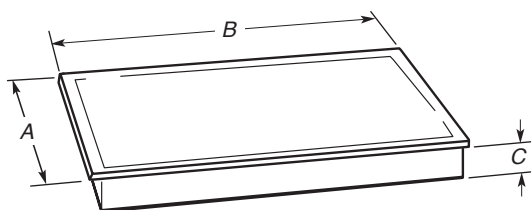


- A. 21 ¾" (55.2 cm)
 B. 30" (76.2 cm) models - 30 13/16" (78.4 cm)
 36" (91.4 cm) models - 36 5/16" (92.3 cm)
 C. 3 ¾" (9.5 cm)

Dimensions are for planning purposes only.
 For complete details, see Installation Instructions packed with product.
 Specifications subject to change without notice.

Dimensions

IMPORTANT: If installing a range hood or microwave hood combination above the cooktop, follow the range hood or microwave hood combination installation instructions for dimensional clearances above the cooktop surface.

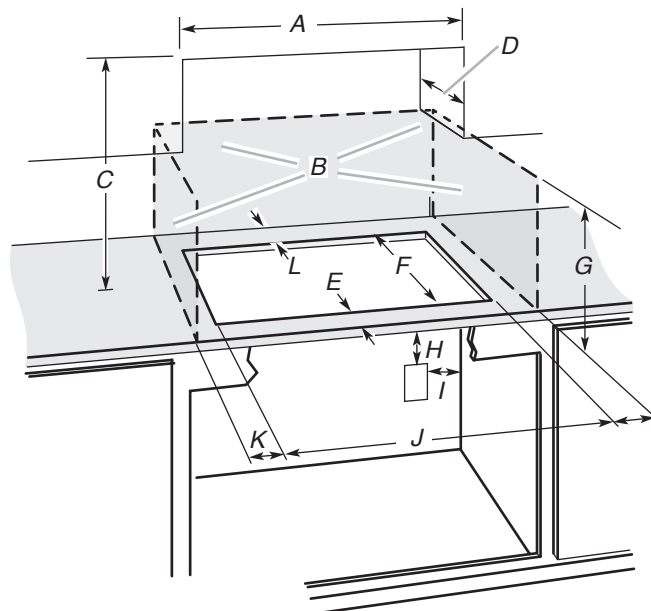

- A. 30" (76.2 cm) on 30" models; 36" (91.4 cm) on 36" models
 B. Combustible area above countertop (shown by dashed box above)
 C. 30" (76.2 cm) minimum clearance between top of cooktop platform and bottom of uncovered wood or metal cabinet (24" [61 cm] minimum clearance if bottom of wood or metal cabinet is covered by not less than ¼" [0.6 cm] flame retardant millboard covered with not less than No. 28 MSG sheet steel, 0.015" [0.04 cm] stainless steel, or 0.024" [0.06 cm] aluminum or 0.020" [0.05 cm] copper)
 D. 13" (33 cm) recommended upper cabinet depth
 E. 2" (5.1 cm)
 F. 20 ½" +/- ¼" (52.0 +/- 0.16 cm)
 G. 18" (45.7 cm) minimum clearance from upper cabinet to countertop within minimum horizontal clearances to cooktop
 H. Junction box or outlet: 7" (17.8 cm) minimum from top of countertop
 I. Junction box or outlet: 9" (23.0 cm) maximum from right side of cabinet
 J. 29 ½" +/- ¼" (74.9 +/- 0.16 cm) on 30" (76.2 cm) models
 35 ½" +/- ¼" (90.2 cm +/- 0.16 cm) on 36" (91.4 cm) models
 K. 1" (2.5 cm) minimum distance to nearest left and right side combustible surface above cooktop
 L. 1" (2.5 cm) minimum clearance between back wall and countertop

NOTES: After making the countertop cutout, some installations may require notching down the base cabinet side walls to clear the cooktop base. To avoid this modification, use a base cabinet with sidewalls wider than the cutout.

If cabinet has a drawer, a 5 ½" (14.0 cm) depth clearance from the top of the countertop to the top of the drawer (or other obstruction) in base cabinet is required.